


MODEL: 50073BRZD

PACKING DIAGRAM

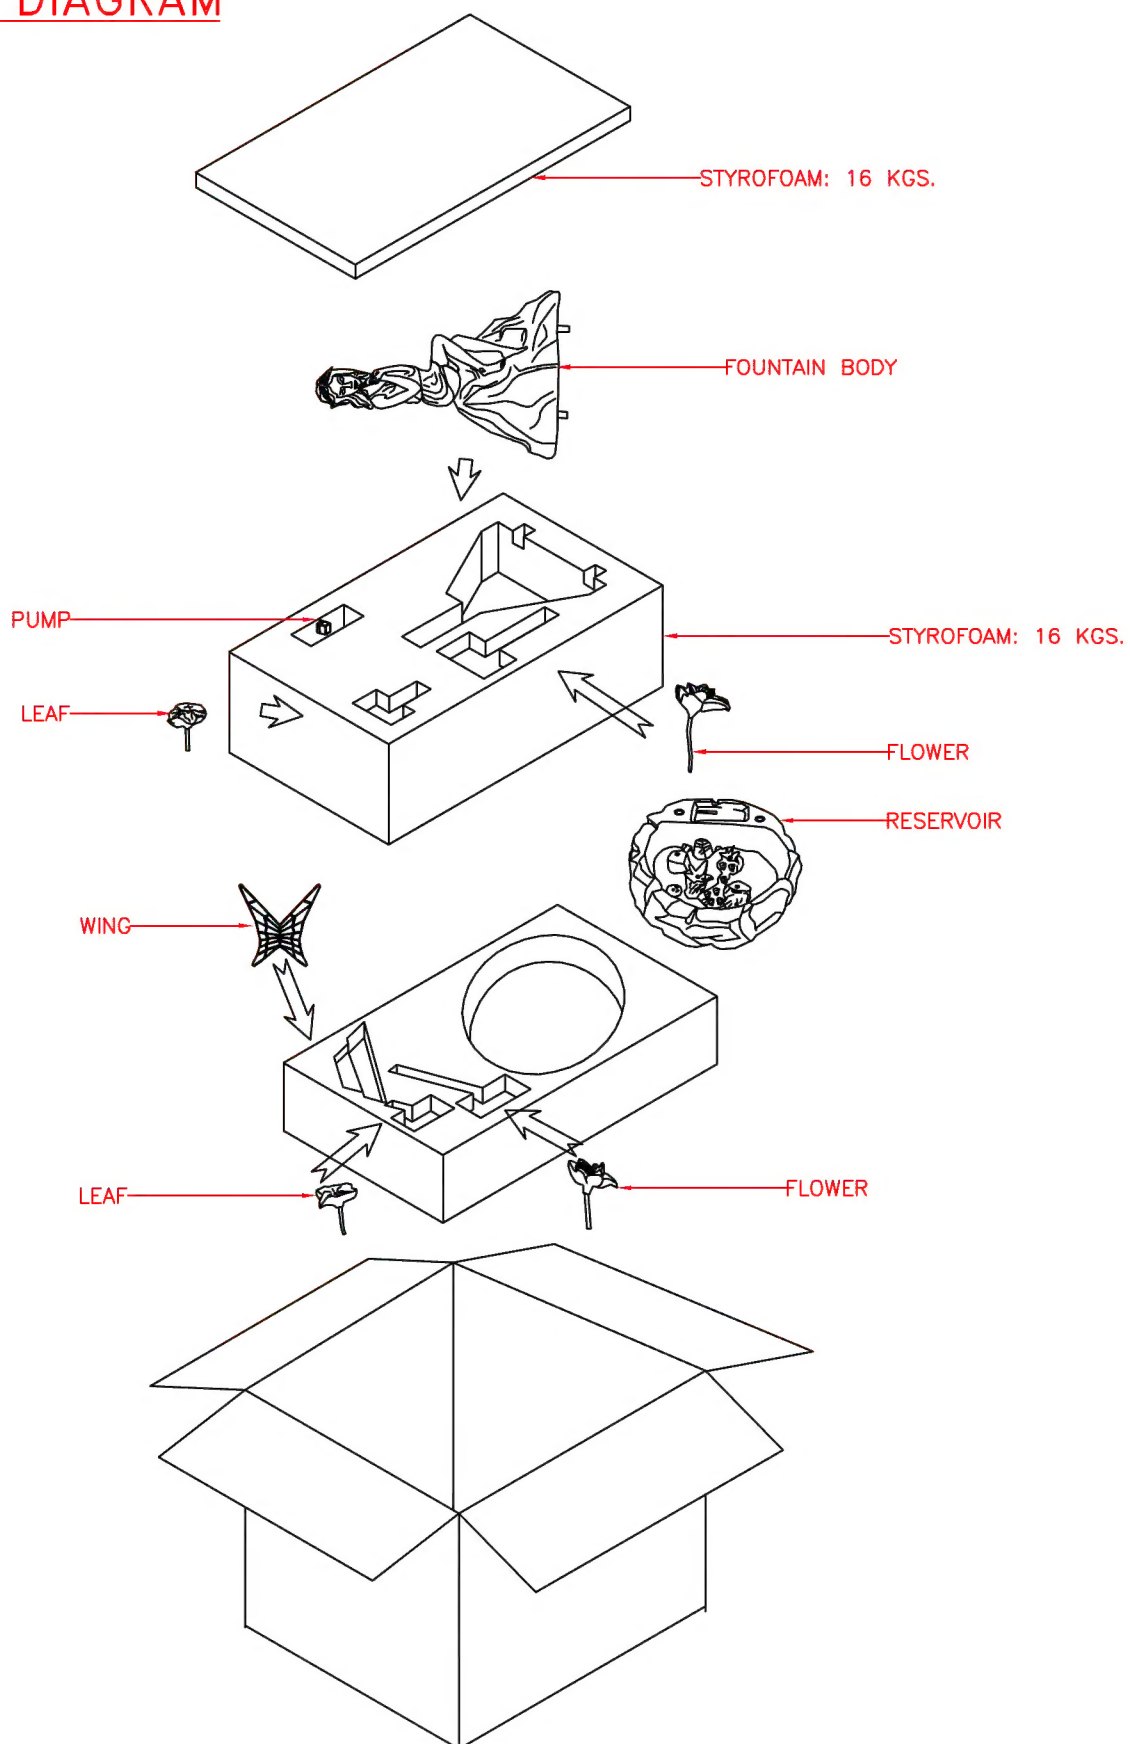

MODEL: 50073BRZD  
**ASSEMBLY INSTRUCTIONS**  
READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FOUNTAIN SHOULD TAKE APPROXIMATELY 15 MINUTES TO ASSEMBLE.


MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

**UNPACK THE FOUNTAIN**


YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS: WING, FOUNTAIN BODY, (2) FLOWERS, (2) LEAVES, RESERVOIR AND PUMP.

**FOUNTAIN ASSEMBLY**


**1. ATTACH PUMP TO RUBBER HOSE, PLACE THE PUMP INTO RESERVOIR, MAKE SURU SIDE OF THE PUMP TOUCHED THE BOTTOM OF THE RESERVOIR. RUN THE POWER CORD OVER THE RESERVOIR AS SHOWN.**

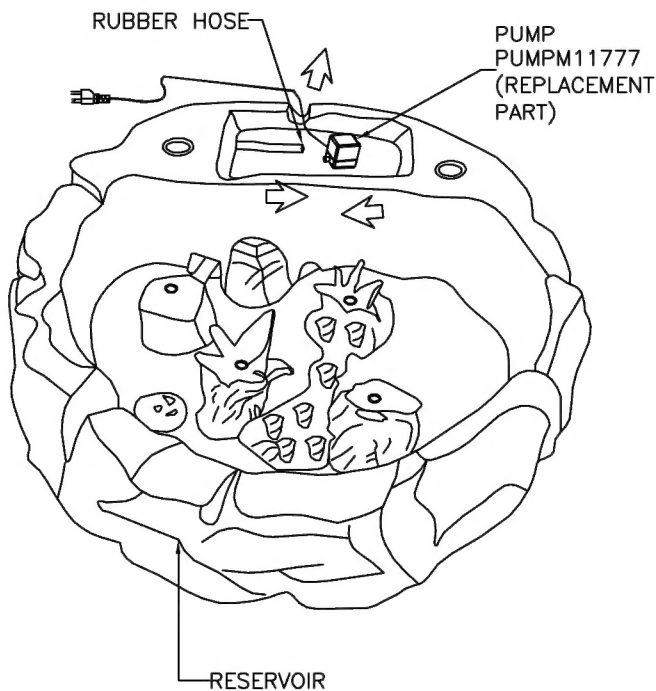

**2. PLACE THE FOUNTAIN BODY ONTO THE RESERVOIR BY INSERTING TWO PINS INTO THE HOLES IN RESERVOIR. ATTACH THE WING TO BACK OF THE FOUNTAIN BODY.**

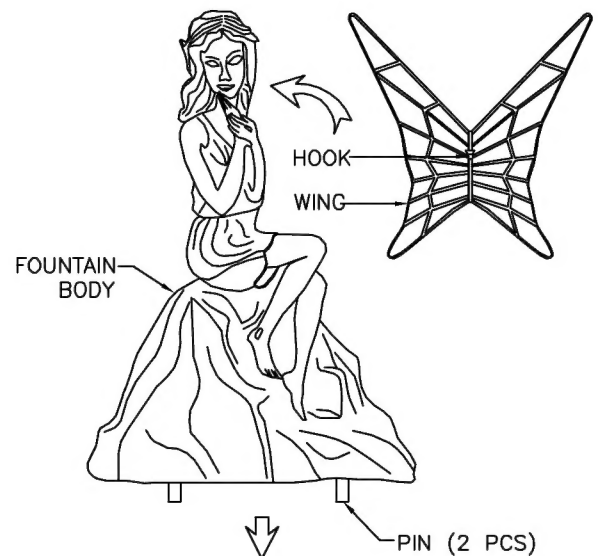

**3. INSERT THE POLE-A INTO HOLE-A, INSERT THE POLE-B INTO HOLE-B, INSERT POLE-C INTO HOLE-C, AND THEN INSERT THE POLE-D INTO HOLE-D AS SHOWN.**

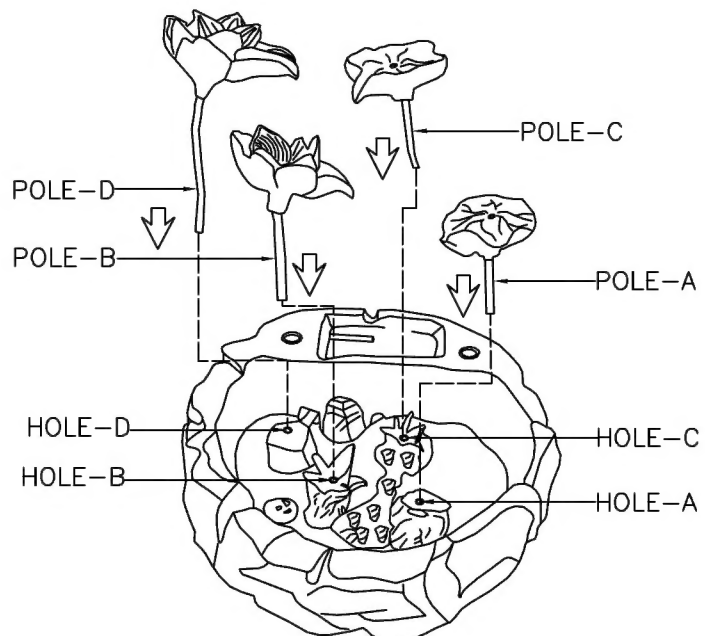


MODEL: 50073BRZD  
**ASSEMBLY INSTRUCTIONS**  
**READ AND SAVE THESE INSTRUCTIONS**

**FOUNTAIN ASSEMBLY**

**4. FILL RESERVOIR WITH 1.2 GALLONS OF WATER TO COMPLETELY SUBMERSE THE PUMP.**

**NOTE:** DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.

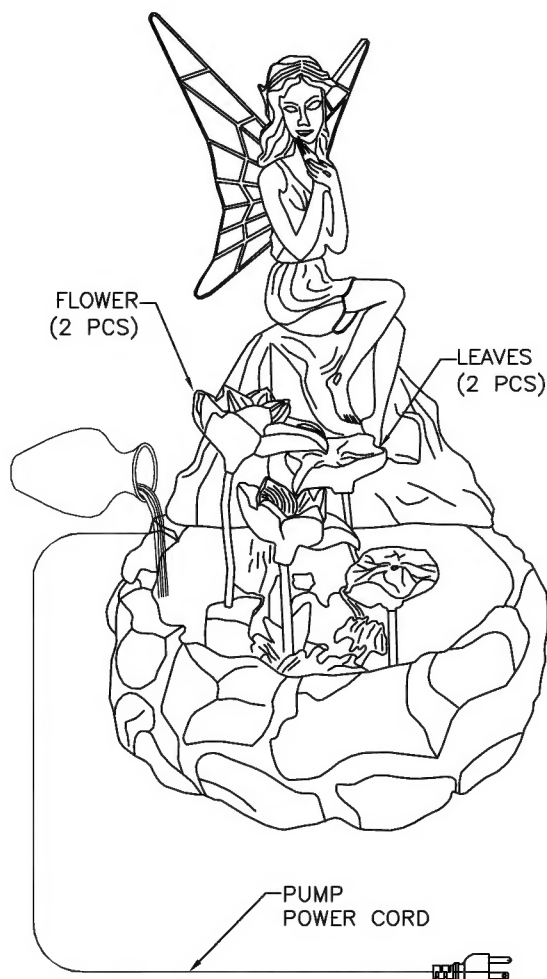

**7. PLUG THE POWER CORD INTO SOCKET. TEST WATER RUNNING, ADJUST THE POSITIONS OF FLOWERS AND LEAVES TO GET THE PROPER WATER RUNNING. ADJUST THE WATER FLOW CONTROL VALVE ON PUMP IF NEEDED.**

**NOTE:** YOU CAN ADJUST THE WATER FLOW CONTROL VALVE ON PUMP TO CONTROL THE SPEED OF THE WATER FLOW.

**TROUBLE SHOOTING:**

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.

2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.

3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

**SPLASHING DISCLAIMER:**

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

**IMPORTANT PUMP INFORMATION:**

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

**WATER:**

TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP THE USE OF DISTILLED WATER IS RECOMMENDED.

**WARNING:**

\* ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD-UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

\*\* THIS FOUNTAIN IS RATED FOR INDOOR AND OUTDOOR USE.

\*\*\* THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.

**AVAILABLE PARTS IS:**  
PUMPM11777 (PUMP)